COOKTOP PARTS

For Model: SE960PEYW3, SE960PEYN3

(White) (Almond)

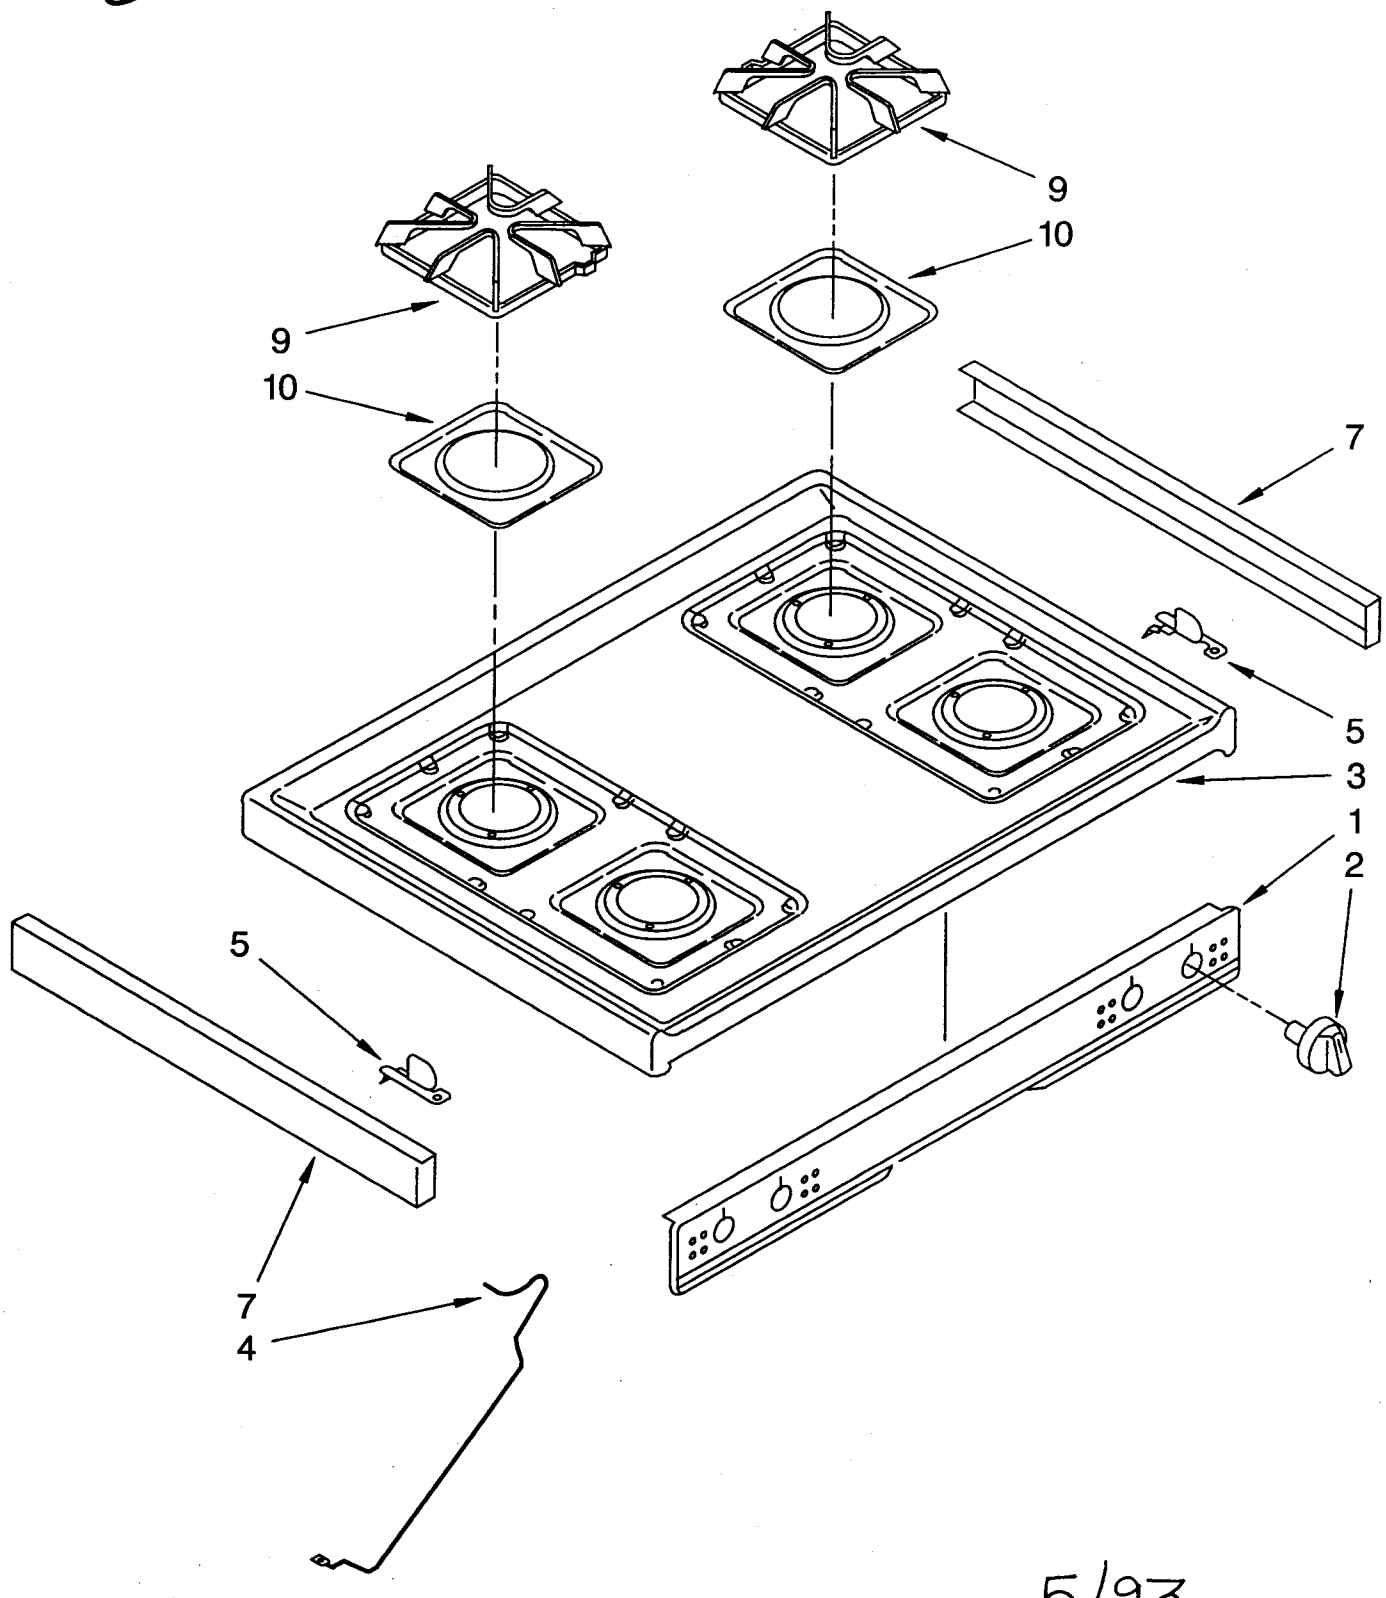

5/93

1	4371563	Panel, Manifold
2	816632	Knob, Control (4)
3		Top, Main
	4371064	White
	4371065	Almond
4	4371039	Rod, Support
5		Bracket, Hinge
	816586	Left
	816721	Right
7		Trim, Top
	4371250	Left
	4371251	Right
9	4371474	Grate (4)
10	4371565	Pan, Burner

CONTROL PANEL PARTS

For Model: SE960PEYW3, SE960PEYN3

(White) (Almond)

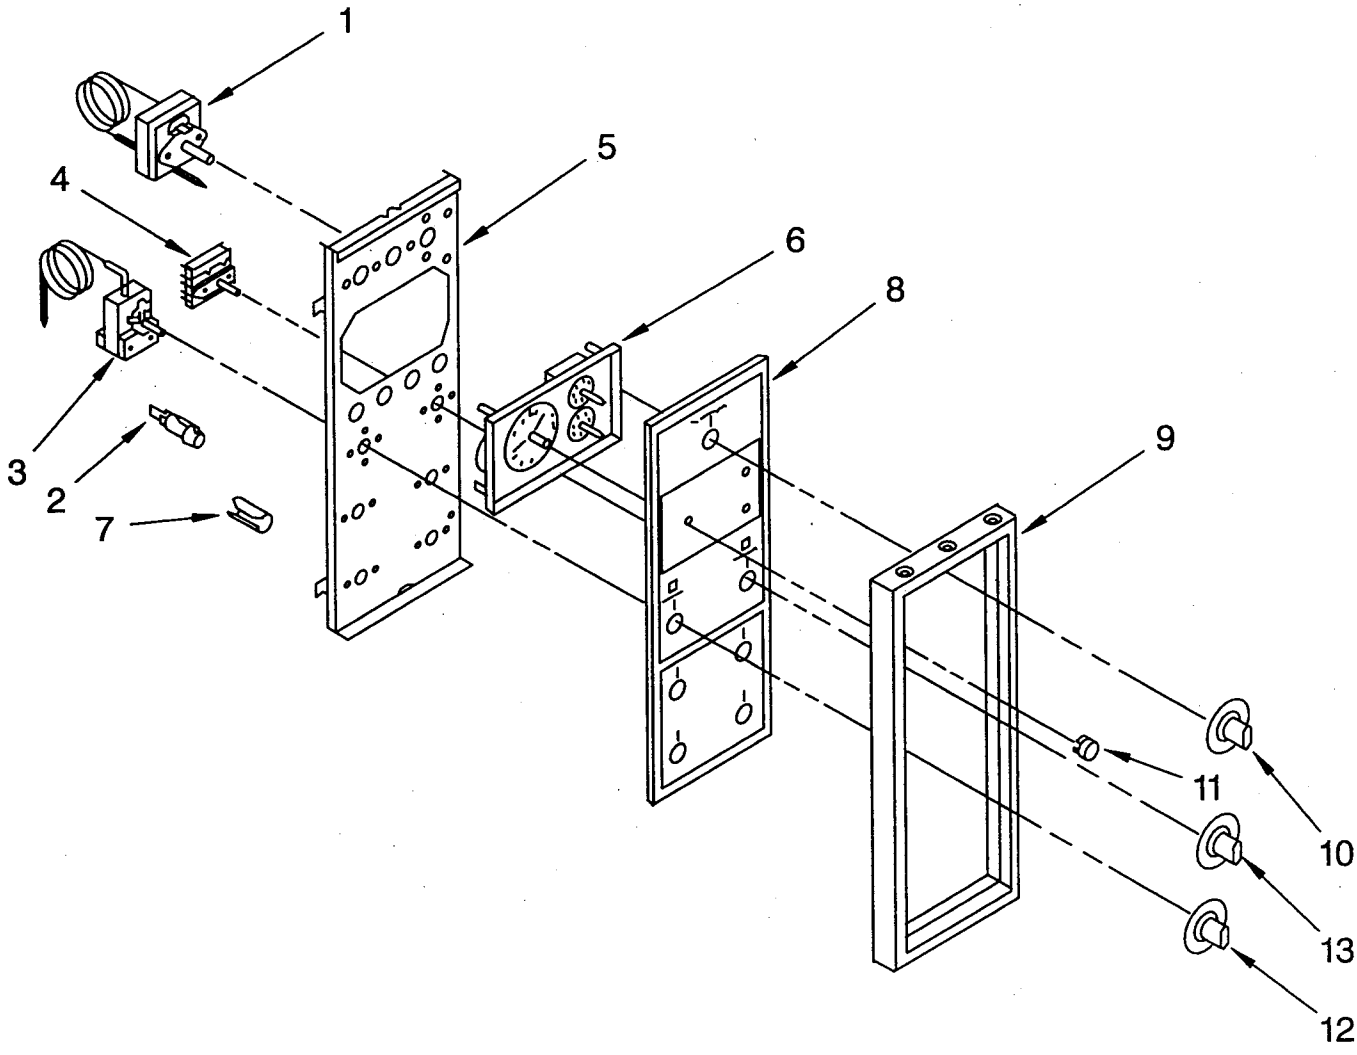

1	4371228	Thermostat, Oven Upper
2	4371053	Indicator Light (4)
3	4371229	Thermostat, Oven Lower
4	4371056	Switch, Selector (5 position)
5	4371495	Bracket, Control Panel
6	4371215	Clock
7	4371208	Fastener, Clock
8	4371214	Glass, Upper Oven Control Panel
9	4371865	Trim, Frame Control Panel
10	4371221	Knob, Thermostat Upper
11	4371866	Knob, Clock (3)
12	4371220	Knob, Thermostat Lower
13	4371219	Knob, Selector Switch
	4371205	Bushing

LOWER OVEN PARTS

For Model: SE960PEYW3, SE960PEYN3

(White) (Almond)

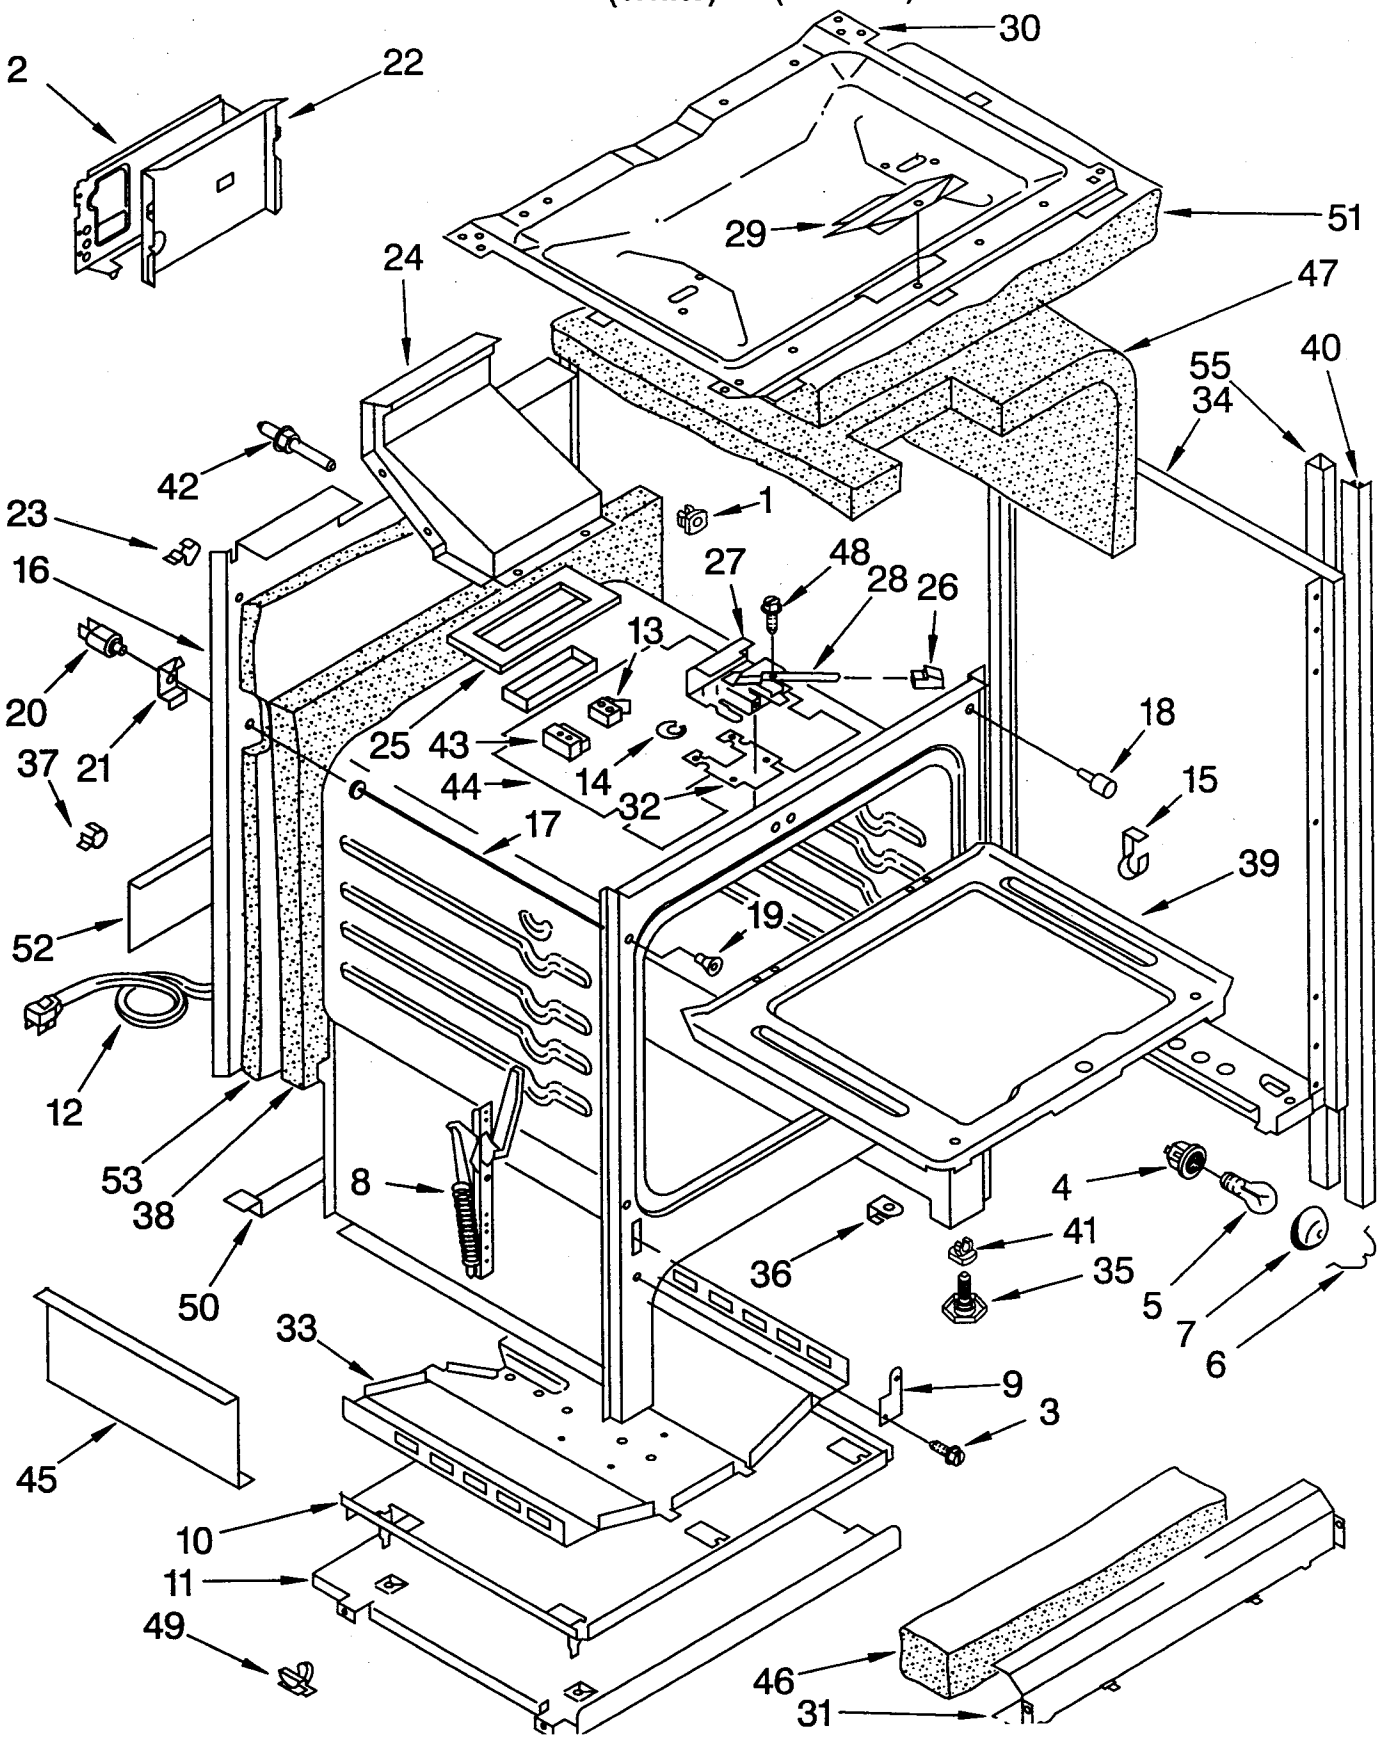

1	816669	Spacer, Body (8)
2	4371619	Shield, Rear Wall
3	816651	Screw, Oven Bottom
4	816668	Socket, Oven Lamp
5	816641	Bulb, Oven Light
6	4371621	Retainer, Lens
7	816609	Lens, Oven Light
8	4371143	Hinge, Oven Door
9	816617	Cover, Hinge
10	4371042	Shield, Heat (Upper)
11	816657	Shield, Heat (Lower)
12	4371191	Cord, Power
13	816640	Switch, Latch
14	816633	Fastener, Push-On
15	4371190	Clip, Thermo Bulb
16	816581	Back, Main
17	4371038	Rod, Light
18	816608	Bumper, Front (4)
19	4371682	Cover, Rod End
20	816671	Switch, Door
21	816587	Bracket, Door Switch
22	4371618	Shield, Rear Heat
23	816577	Clip, Wire
24	816619	Flue Box
25	816620	Gasket, Flue
26	4371144	Knob, Latch
27	4371036	Latch, Door
28	4371265	Handle, Latch
29	816615	Cover, Plate
30	4371025	Burner Box
31	816776	Shield, Main Front
32	816638	Shield, Latch
33	816660	Shield, Heat Baffle
34		Panel, Side
	816709	White LH
	816708	White RH
	816695	Almond LH
	816672	Almond RH
35	816650	Screw, Leveler (4)
36	816670	Support, Oven Bottom
37	816618	Fastener, Cord
38	816630	Insulation, Oven Back
39	4371018	Bottom, Oven
40	4371252	Trim, Side (2)
41	4371867	Fastener, T Nut(4)
42	816639	Spacer, Stud (2)
43	816637	Shield, Latch
44	816658	Shield, Oven Top
45	816648	Shield, Side(2)
46	816627	Insulation, Front
47	816629	Insulation, Oven Wrapper
48	4371664	Screw, Latch
49	816621	Glide, Drawer
50	816585	Bracket, Anti-Tip
51	816628	Insulation, Ov Top
52	816663	Shield, Wire
53	816664	Shield, Wool

55	4371258	Tube, Post RH
	4371257	Tube, Post LH

LOWER OVEN PARTS
For Model: SE960PEYW3, SE960PEYN3

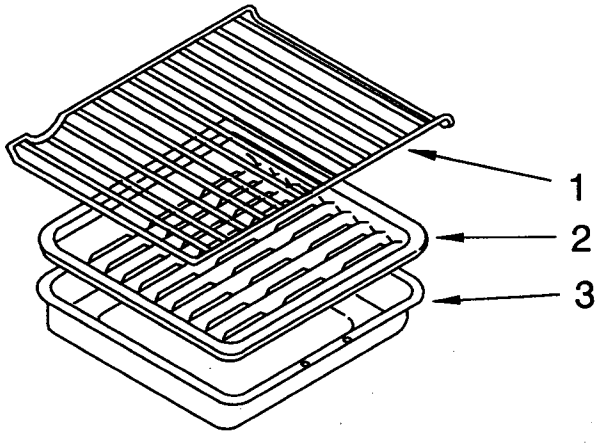

OVEN RACK PARTS

1	4371483	Rack, Oven (2)
2	816626	Insert, Broiler Pan
3	816644	Pan, Broiler

MANIFOLD AND BURNER PARTS

For Model: SE960PEYW3, SE960PEYN3
(White) (Almond)

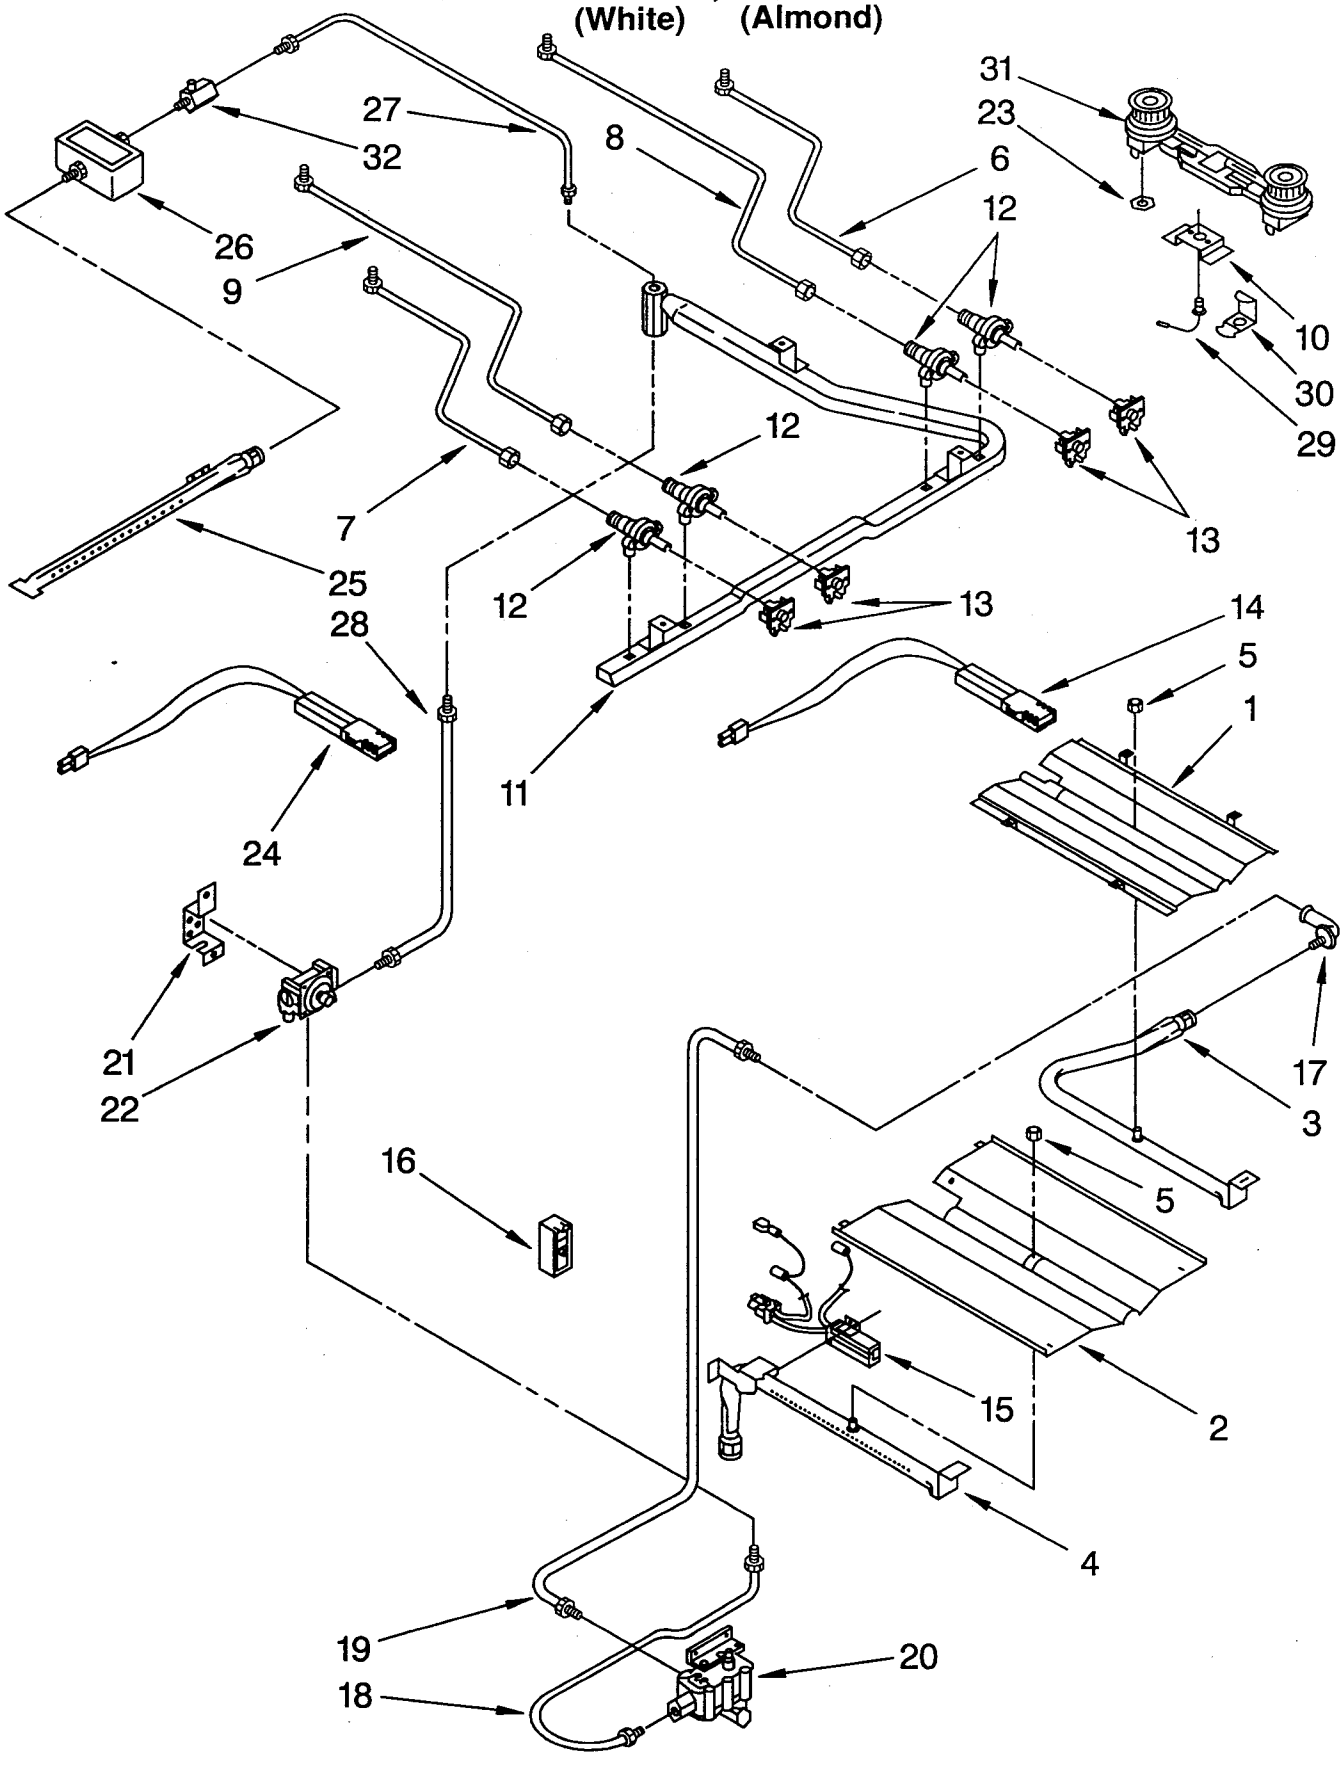

1	816582	Baffle, Broiler Burner
2	816584	Baffle, Oven Burner
3	816722	Burner, Broiler
4	816588	Burner, Oven
5	816642	Nut, Hex (2)
6	4371021	Tube, Burner (RF)
7	4371022	Tube, Burner (LF)
8	4371023	Tube, Burner (RR)
9	4371024	Tube, Burner (LR)
10	4371019	Bracket, Burner Mounting
11	4371180	Pipe, Manifold
12	4371504	Valve, Top 3 Position (4)
13	4371164	Switch, Ignitor (4)
14	816624	Ignitor, Broiler Burner
15	816625	Ignitor, Oven
16	4371030	Spark, Module
17	816594	Mixer, Elbow
18	4371260	Tubing, Valve To Regulator
19	816689	Tubing, Valve To Mixing Elbow
20	816692	Valve, Dual
21	816636	Bracket, Regulator
22	4371032	Control, Regulator
23	4371029	Nut
24	4371216	Ignitor, Upper Oven
25	4371204	Burner, Upper Oven
26	4371232	Valve, Upper
27	4371259	Tube, Upper Oven Valve
28	4371261	Tube, Regulator Manifold
29	4371017	Ignitor, Top Burner (4)
30	4371242	Retainer, Ignitor
31	4371020	Burner, (2) Top
32	4371233	Valve, Shut Off

Following Parts Not Illustrated

4371231	Tube, Spacer
4371223	Retainer, Burner Bracket
4371227	Support, Thermo Valve

INSULATION

261514	Insulation, Fiberglass (1 1/2" X 24" X 120"
240132	Insulation, Fiberglass (2 1/4" X 22" X 120"
241430	Foil, Aluminum Oven (18" X 25')

LITERATURE PARTS

LIT816988	Use & Care Guide
LIT816989	Installation Instructions
LIT4372161	Repair Parts List

UPPER OVEN SUPPORT PARTS

For Model: SE960PEYW3, SE960PEYN3
(White) (Almond)

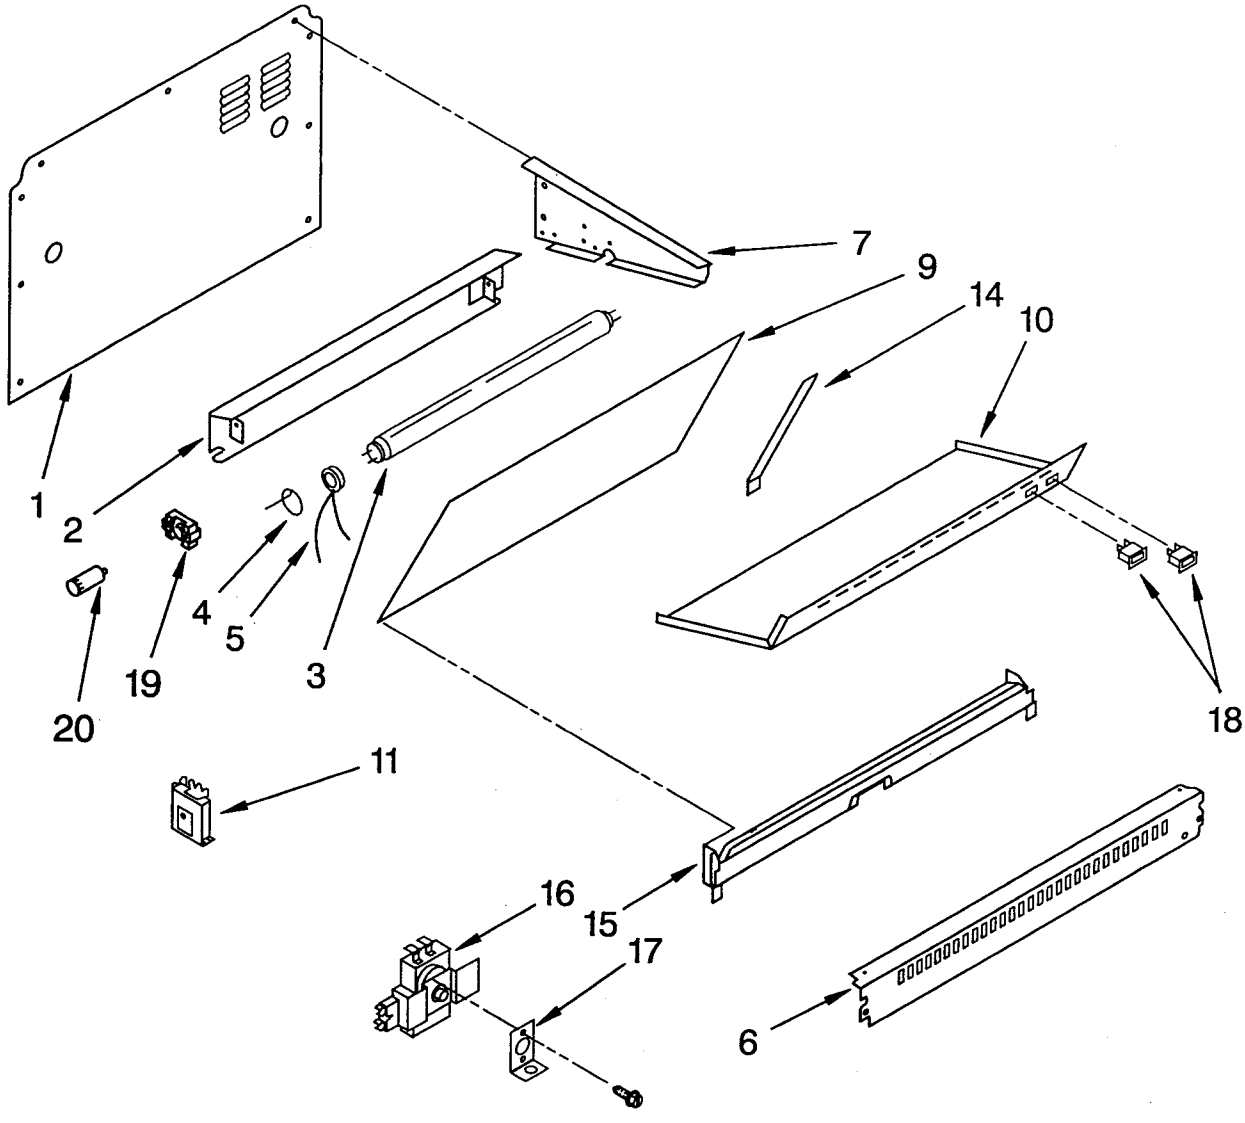

1	4371177	Back, Upper Oven
2	4371241	Reflector
3	4371201	Bulb
4	4371200	Insulator
5	4371870	Receptacle
6	4371256	Vent, Trim
7		Support, Oven
	4371246	Left Hand
	4371245	Right Hand
9	4371193	Glass, Upper Oven
10	4371869	Splasher, Panel (Upper)
11	4371178	Ballast
14		Trim, Upper Oven
	4371248	Left Hand
	4371249	Right Hand
15	4371255	Trim, Upper Oven Spl. Filler
16	4371247	Thermostat
17	4371176	Angle Bracket
18	816703	Switch, Rocker
19	4371239	Starter, Receptacle
20	4371243	Starter

DOOR AND DRAWER PARTS

For Model: SE960PEYW3, SE960PEYN3
(White) (Almond)

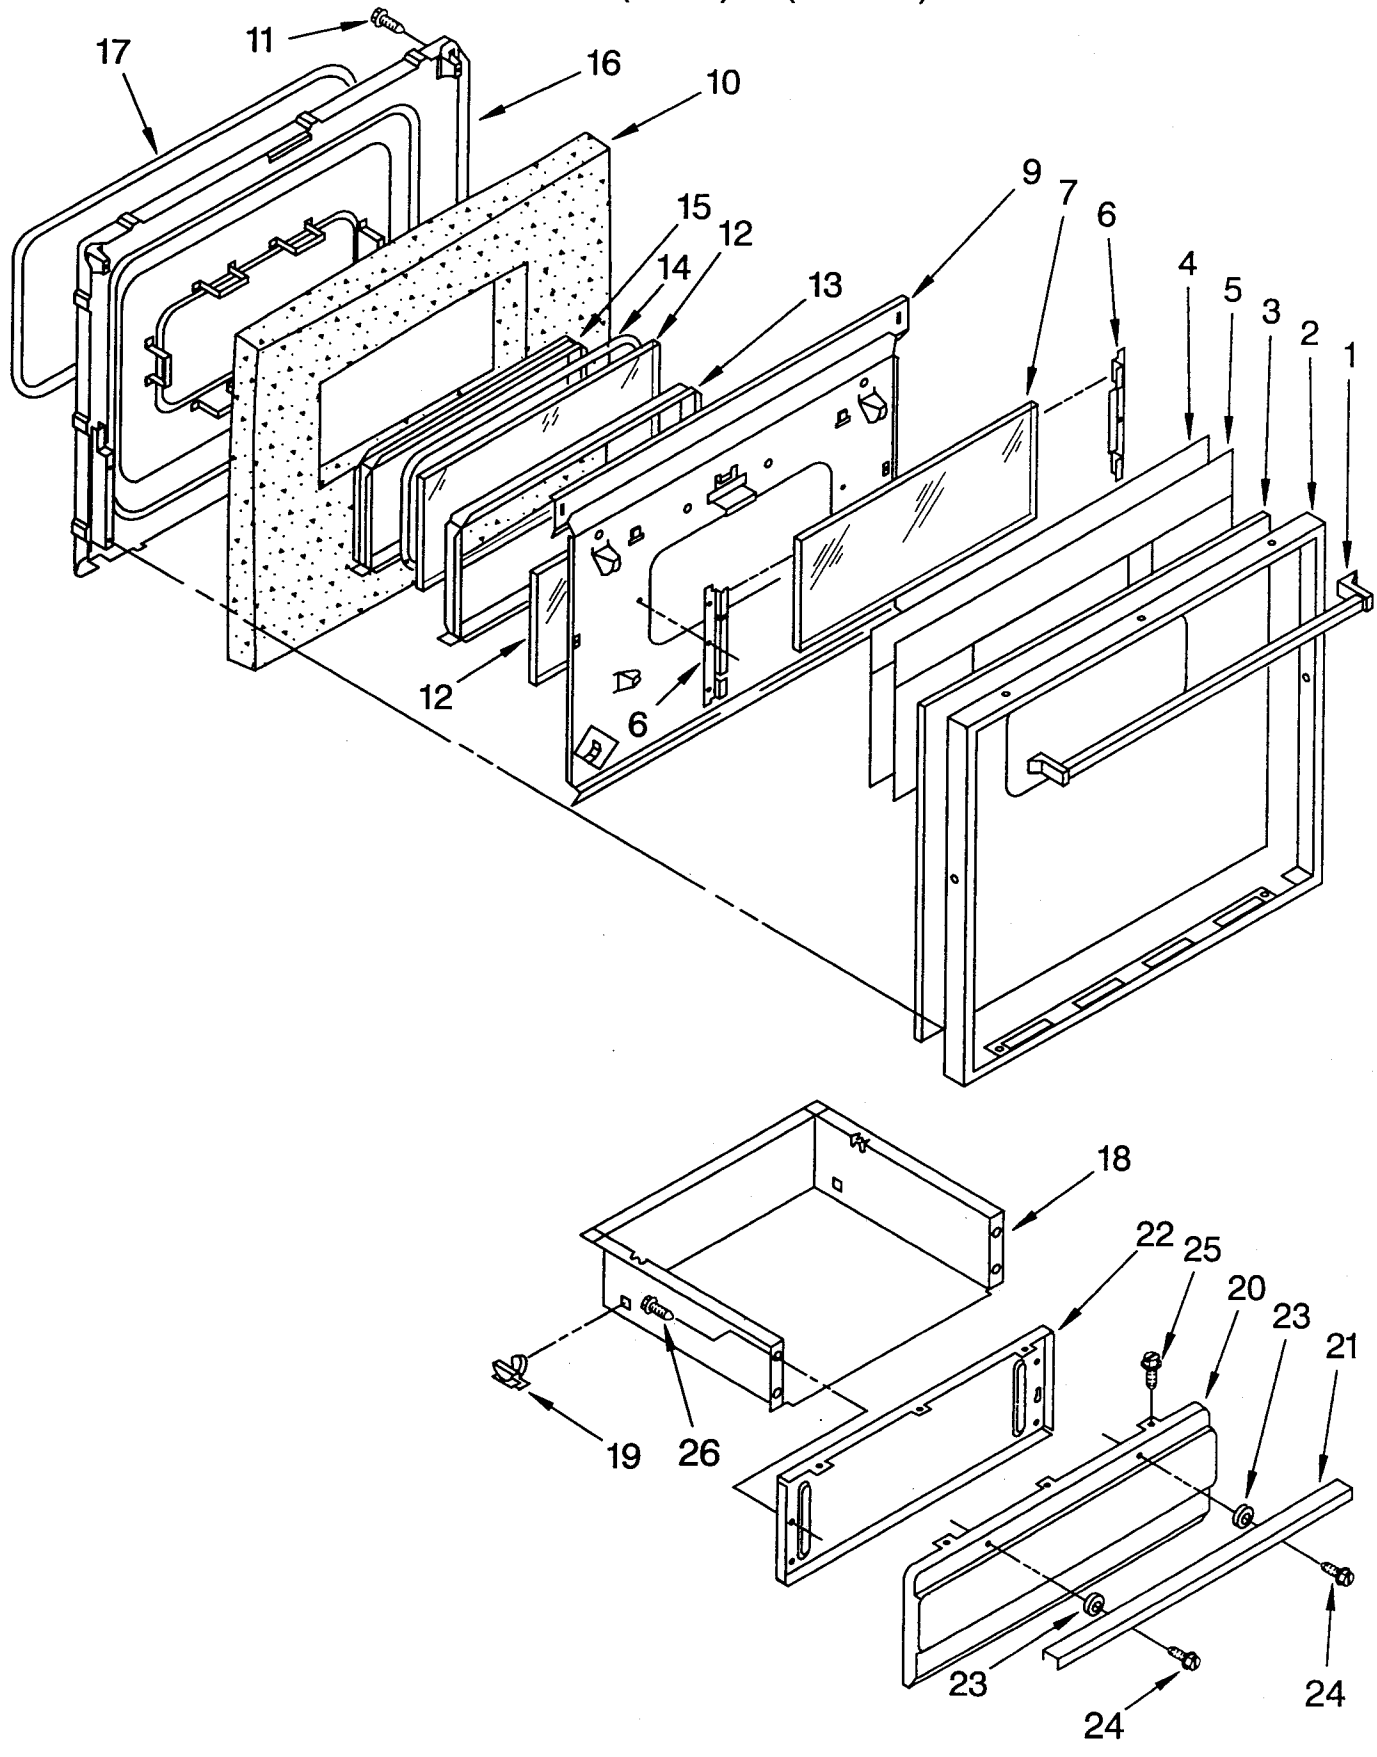

1	816622	Handle, Door
2	816688	Trim, Door
3	4371690	Glass, Door
4	816674	Foil, Aluminum
5	816675	Foil, Aluminum
6	816676	Bracket, Glass
7	816679	Window, Door
9	4371253	Shield, Wool
10	816682	Insulation, Oven Door
11	4371542	Screw, Handle
12	816681	Glass, Heat Shield
13	816687	Spacer, Glass
14	816684	Seal, Oven Window
15	816677	Collar, Glass
16	816683	Liner, Oven Door
17	816685	Seal, Oven Door
18	4371671	Drawer, Utility
19	816712	Guide, Drawer
20		Panel, Drawer
	816754	White
	4371130	Almond
21	4371060	Handle
22	816716	Shield, Panel
23	816713	Spacer, Handle
24	4371063	Screw, Handle (2)
25	4371061	Screw, Panel (4)
26	4371062	Screw, Drawer (4)

UPPER OVEN DOOR PARTS

For Model: SE960PEYW3, SE960PEYN3
(White) (Almond)

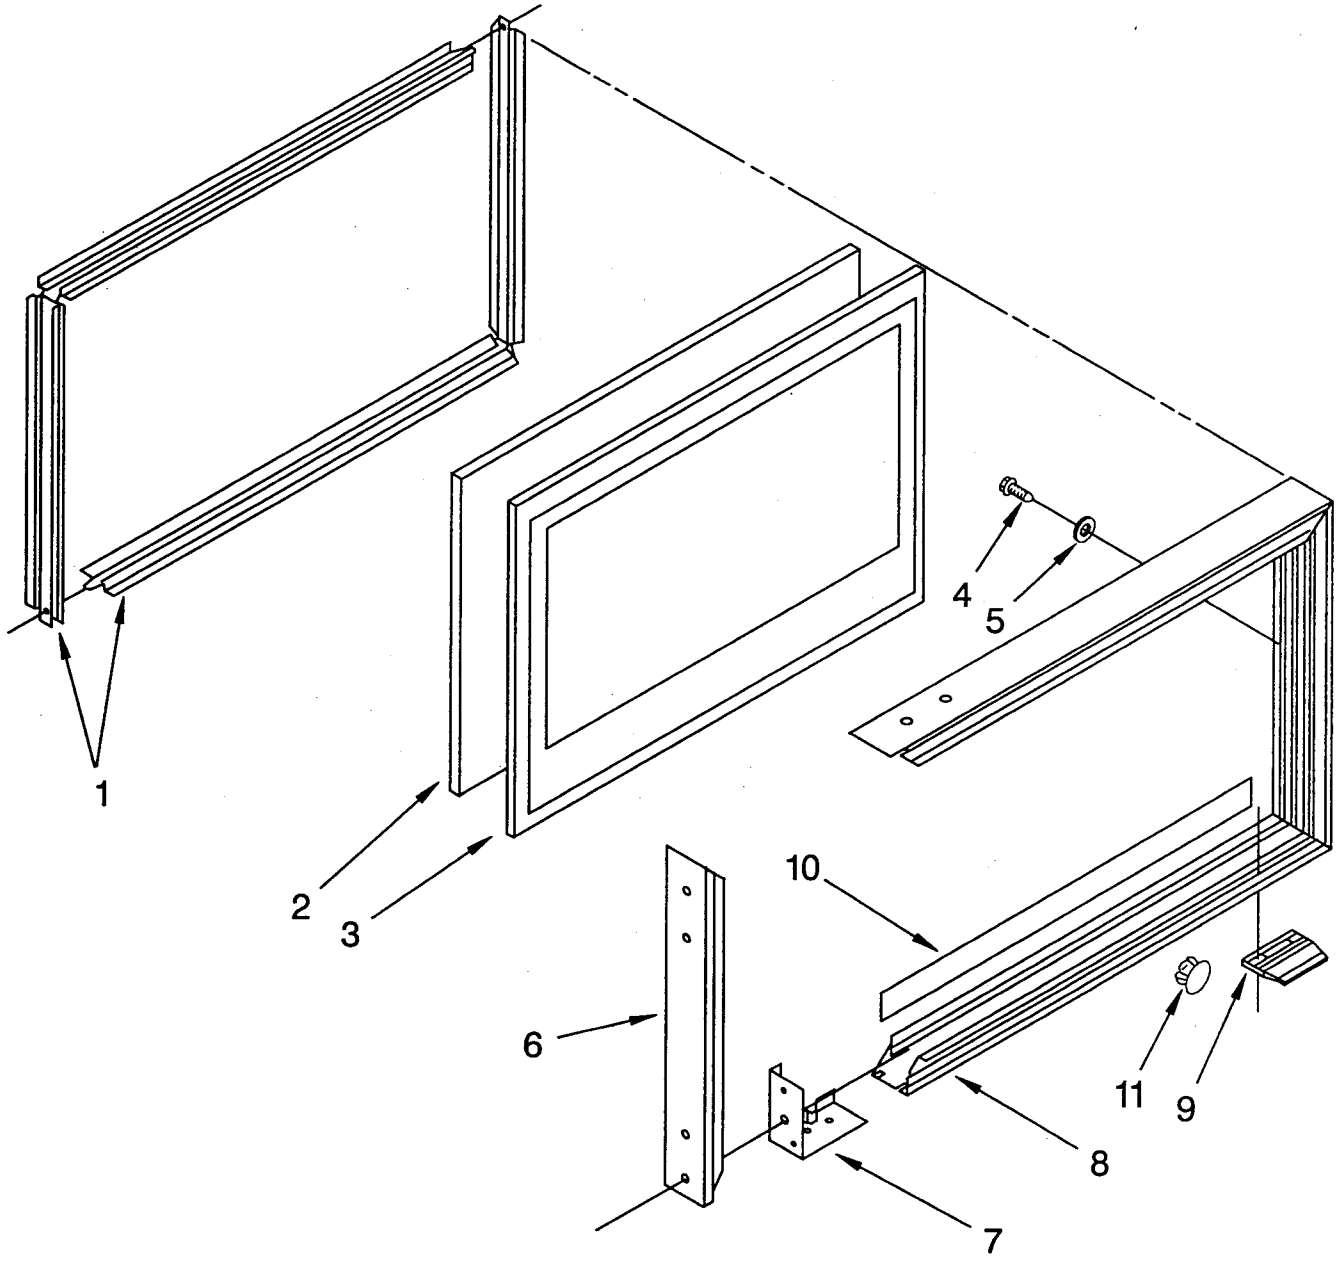

1	4371187	Spacer, Glass
2	4371184	Glass, Rear
3	4371183	Glass, Door Front
4	4371862	Strike, Upper Oven Latch
5	816642	Nut, Door Strike
6	4371859	Channel, Upper Oven Door
7	4371185	Gusset, Oven Door
8	4371860	Channel, Upper Oven Door Frame
9	4371186	Handle, Door
10	4371188	Spacer, Upper
11	4371861	Button, Wear Oven Door

UPPER OVEN PARTS

For Model: SE960PEYW3, SE960PEYN3
(White) (Almond)

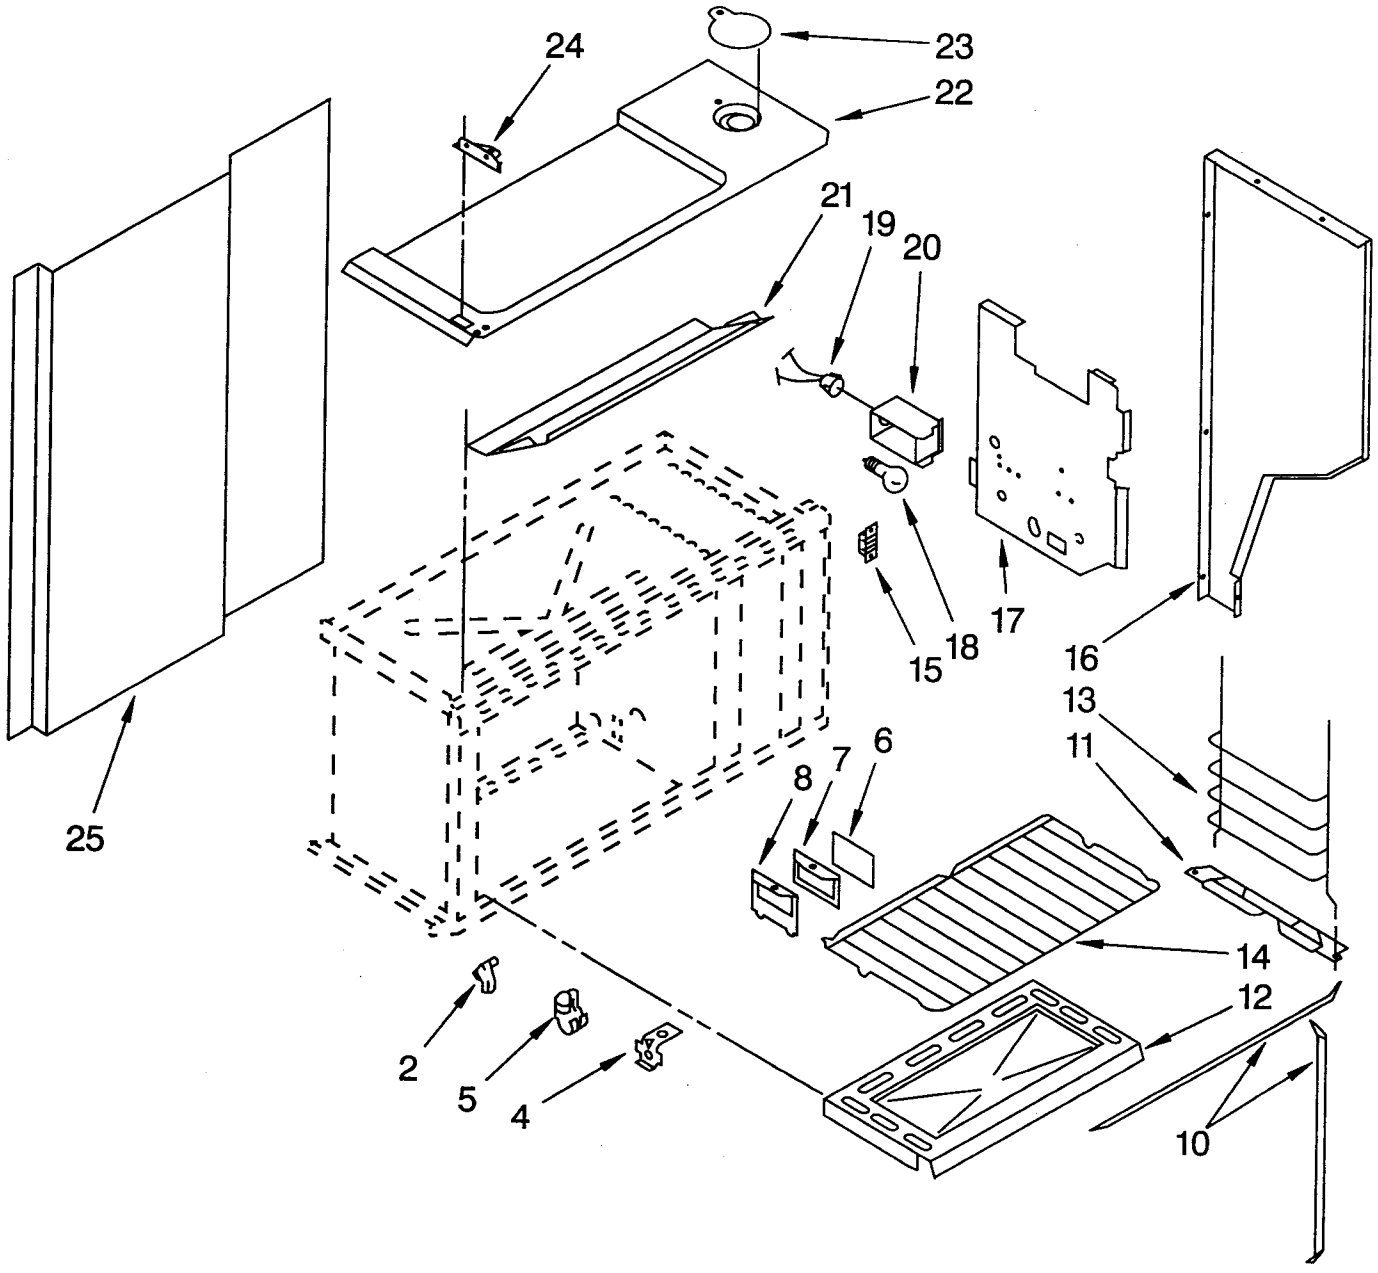

2	4371213	Hinge, Door
4	4371222	Plate, Hinge
5	4371031	Clip, Bulb
6	4371211	Glass, Lens
7	4371210	Gasket, Light
8	4371207	Cover, Lens
10	4371868	Seals, Door (Top, Bottom and Sides)
11	4371212	Glide, Oven
12	4371179	Bottom, Oven
13	4371863	Glide, Oven Rack
14	4371238	Rack, Oven
15	4371206	Catch, Door
16		Panel, Back Side
	4371262	Right (White)
	4371272	Right (Almond)
	4371263	Left (White)
	4371273	Left (Almond)
17	4371226	Shield, Wool Upper Oven
18	816641	Light Bulb
19	816668	Socket, Light
20	4371864	Box, Upper Light
21	4371203	Flue, Oven
22	4371236	Top, Oven
23	4371192	Cover, Outlet
24	4371194	Hinge, Door Top
25	816581	Back, Main

Following Parts Not Illustrated

4371203	Bracket, Mtng.
4371217	Insulation Oven
4371218	Insulation, Wool
4371224	Retainer, Burner
4371871	Strike, Door
4371196	Insulation, Wool Splasher
4371197	Insulation, Wool
4371175	Foil, Aluminum
4371857	Angle,Wool Shield